

INSTRUCTIONS FOR USE OF A COMBINED MICROWAVE OVEN

gorenje
BY
ora'ito



Rotate the knob (left and right) to select 0 **COOKING SYSTEM** (see program table). The selected icon will appear on the display

Settings can also be changed during operation.

OVEN COOKING SYSTEMS

	RAPID PREHEAT		HOT AIR
	UPPER AND BOTTOM HEATER		PLATE WARMER
	GRILL		ECO COOKING
	GRILL WITH FAN		AQUA CLEAN
	HOT AIR AND BOTTOM HEATER		DEFROSTING

MICROWAVE SYSTEMS / COMBINED SYSTEMS

	GRILL WITH FAN + MICROWAVES
	HOT AIR AND MICROWAVES
	MICROWAVES

OVEN EQUIPMENT AND ACCESSORIES



GLASS BAKING DISH is used for cooking with all oven systems and for cooking with microwaves. It can also be used as a serving tray



 
Never use the grid, the shallow baking sheet or the deep baking tray or any other metal part or accessory when operating a system with microwaves



The **GRID** is used for grilling or as support for a pan, baking tray or baking dish with the food



The **SHALLOW BAKING SHEET** is used for baking pastry and cakes.



The **DEEP BAKING TRAY** is used for roasting meat and baking moist pastry. It can also be used as a drip tra

For more detailed instructions and tips, please visit
<http://www.gorenje.com>