 


# GORENJE


## ELECTRIC COOKTOP

### Quick User Guide

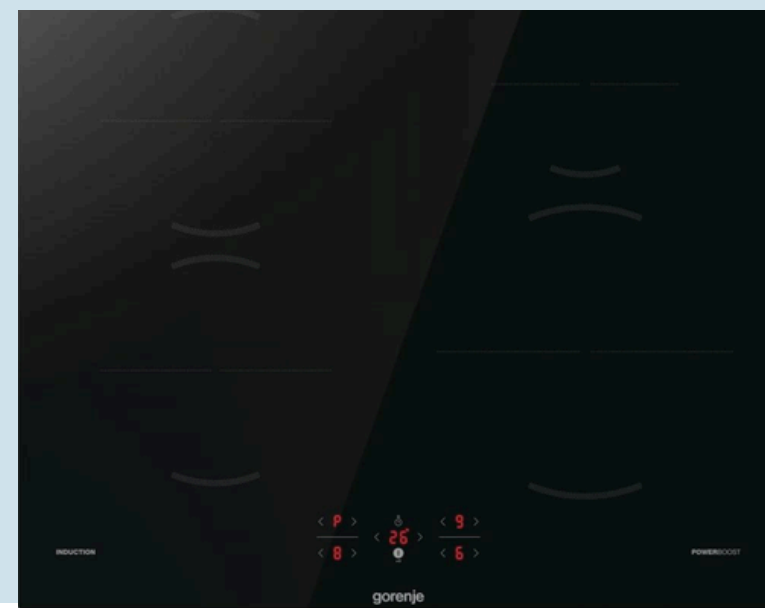

#### CONTROL UNIT


- A**-Hob on/off and lock key
- A1**-Appliance on indicator light
- C**-Stop & Go (pause) key
- C1**-Stop & Go (pause) indicator light
- D**-Minute minder of power off timer key
- E**-Extended cooking zone indicator light
- F**-Power level/residual heat displays
- G**-Power increase key (+)
- I**-Power decrease key (-)
- J**-Left extended heating zone on/off key

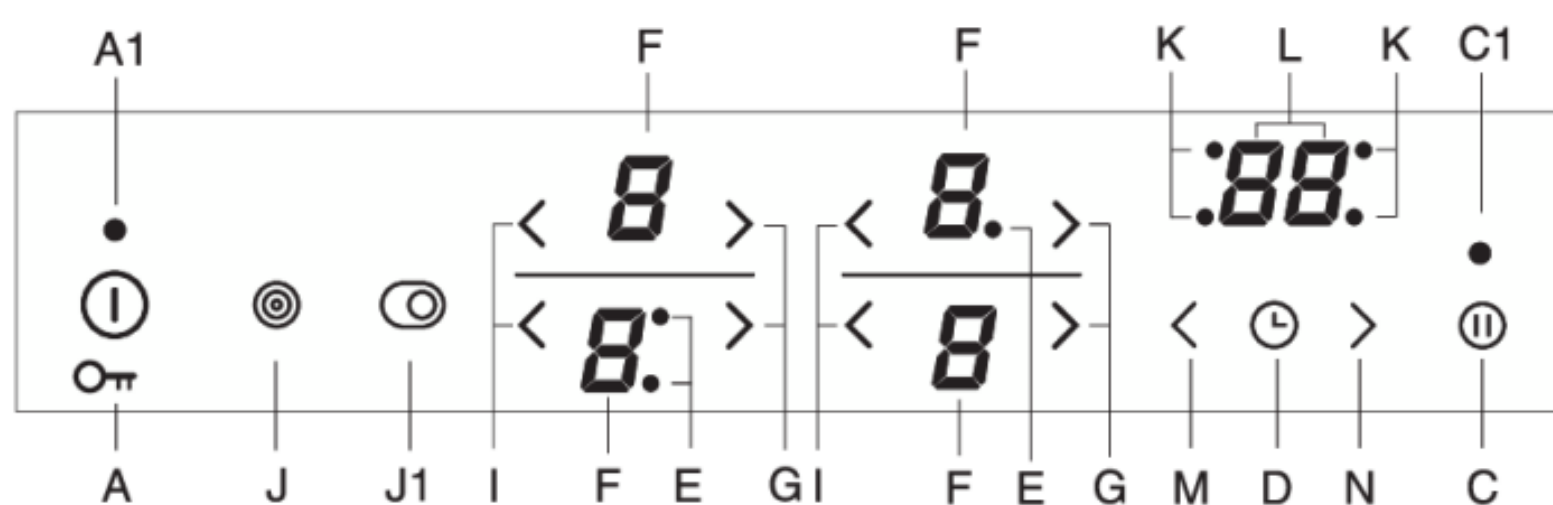

- J1**-Right extended heating zone on/off key
- K**-Timer-operated cooking zone indicator
- L**-Timer display
- M**-Timer settings decrease key
- N**-Timer settings increase key

#### QUICK USE

1. Press and hold **Power** (⏻) for 1 second
2. Select a cooking zone
3. Use < / > to adjust the power level (1-9)
4. Place cookware on the zone
5. To stop → reduce to 0 or turn off

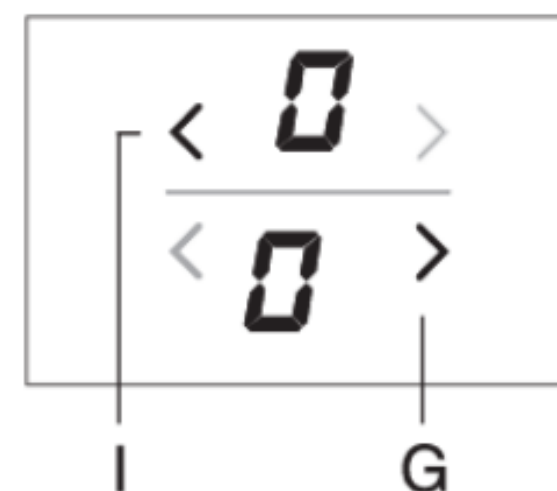


#### CHILD LOCK (SAFETY LOCK)

##### How to Lock

1. Make sure the hob is **turned off**
2. Press and hold **Power** (⏻) for **3-10 seconds**
3. The display shows **“L”** → the hob is locked.

##### How to Unlock

1. Make sure the hob is **turned off**
2. Press and hold **Power** (⏻) for **3-10 seconds**
3. **“L”** changes to **“0”** → the hob is ready to use.

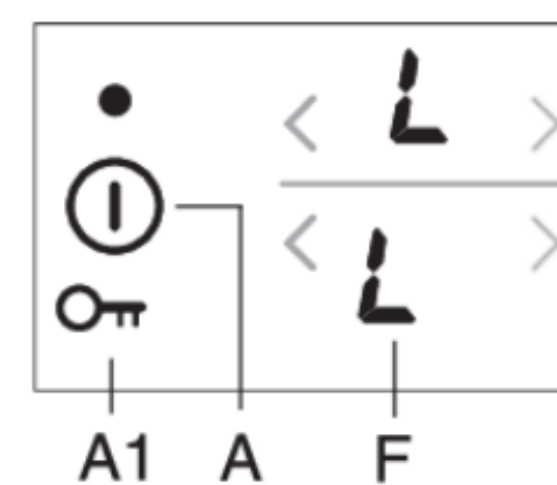

IF YOU SEE “L”,  
**THE HOB IS LOCKED**

#### IMPORTANT TIPS ⚠️

- The surface **heats up directly** (even without a pot)
- The hob turns off automatically if not used within a 10 seconds
- Surface may stay hot after use (“H” indicator)
- Touch and hold buttons to change power faster

#### ASSISTANCE

If you need any assistance, our reception team will be happy to help.