

# WASHING MACHINE

## GORENJE

### Quick User Guide



#### IMPORTANT SAFETY INFORMATION

- Please do not overload the drum (**maximum 4–5 kg**) .
- Do not attempt to open the door while the machine is running – it will unlock automatically at the end of the cycle.

#### BEFORE WASHING

- Before washing, kindly check all pockets and remove coins, keys, or other hard objects to prevent damage.
- We recommend sorting laundry by color (whites and darks) and fabric type (cotton, synthetics, delicate items).
- Close zips and fasten buttons before placing garments loosely into the drum, one item at a time.

#### DETERGENT

- Please **use the provided washing 3 in 1 capsules** only, as they are suitable for the machine.
- Place the capsule directly inside the drum before loading the laundry.
- If additional capsules are needed, kindly contact reception.

#### STARTING THE CYCLE

- Select the desired program using the control dial and press **Start/Pause** to begin.
- The door will unlock automatically once the cycle has finished.

#### ASSISTANCE

- **If you need any assistance, our reception team will be happy to help.**

**For more detailed instructions and tips, please visit <http://www.gorenje.com>**