

# COMPUTHERM DIGITAL THERMOSTAT

## Quick User Guide



### ROOM TEMPERATURE

- **The number** shown in **the center of the screen** indicates the current room temperature.

### SET TEMPERATURE

- **The number** displayed in **the top right corner** shows the temperature the system is set to reach.

### HEATING ACTIVE

- **A flame icon** in the lower-left corner indicates that the heating system is currently operating.

### REGULATE THE TEMPERATURE

- Press the “+” **button once** — the thermostat will immediately set to 22.0 °C. You can then adjust the desired temperature further if needed.
- Press the “-” **button once** — the thermostat will immediately set to 18.0 °C. You can then adjust the desired temperature further if needed.

The system will gradually adjust to reach the selected temperature.

### LOCKED BUTTONS

- If the screen says ‘LOC’ or does not respond, you can unlock: press and hold the **+ and - buttons together for 5 seconds** until "DC" appears on the screen. You can then adjust the desired temperature.

### LOW BATTERY

- If a battery icon appears on the display, please contact reception so we can replace the batteries.

### ASSISTANCE

- **If you require any help** adjusting the temperature, please contact reception — we will be happy to assist you.